



*NOTE 1: Items in () are for older model sensors.

*NOTE 2: New HMP45 sensors have eliminated the control signal, and must have their +12V wire connected to SW12V so the sensor is not powered up continuously. When installing a new type sensor, pay attention to items shown in RED.

<i>Micro Specialties, Inc.</i> Wasilla, Alaska			
Sensor Wiring Detail, New Temp/RH sensor wiring			
Date: 2005/3/8	Size: A	Scale:	File: